

Comfort Call (ACC0433) allows up to four thermostats to be linked to one Base Station. This can be accomplished by installing an RF Wireless Module (ACC0434) at each additional thermostat. The linking procedure for thermostats numbered two through four is the same as what is described for a single thermostat on pages 6-9 of the Comfort Call Owner's Manual.

To connect the RF Wireless Module to the thermostat, insert the RF Wireless Module plug into the accessory jack of the thermostat. The RF Wireless Module has two tabs that fit into the ventilation slots of the thermostat for added stability.

The Base Station recognizes the additional thermostat(s) and stores them by number, in the order they are linked to the Base Station. When more than one thermostat is linked, the main menu will include the prompt, "For the next thermostat, press four, or say next thermostat." Additionally, before the status is given, the thermostat will say, "You are controlling thermostat number 1 (2, 3, or 4)" (see page 14 of the Comfort Call Owner's Manual).

To remove the RF Wireless Module from the thermostat, press and hold the accessory release button while removing the RF Wireless Module from the thermostat's accessory jack.

